










Assembly Instructions / Navodila za montažo /
Montageanleitungen

MOD NO - BERNI



 6*13 Ax4	 6*25 Bx2	 Cx8	 Dx1	 6*18 Ex2
 1	 2	 3		

1

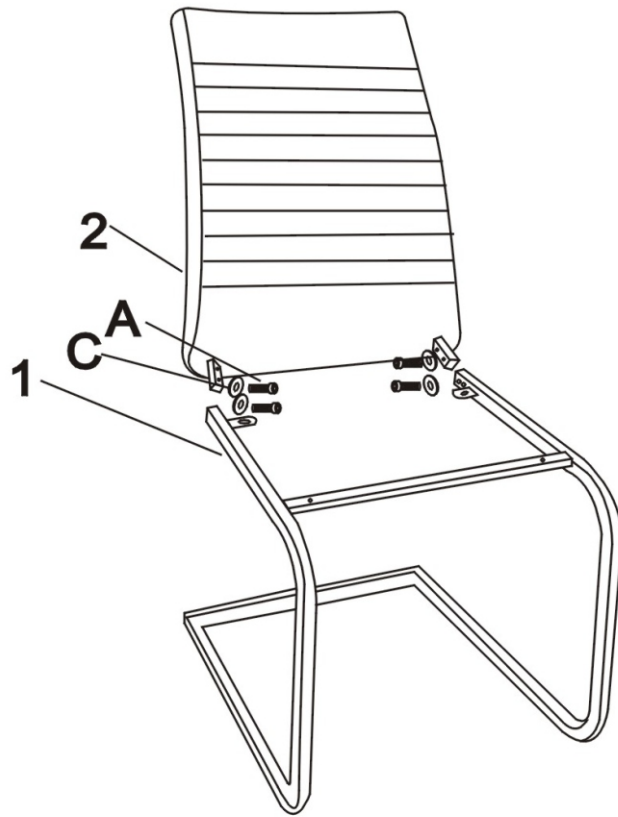

2

