


ORGANIC OAK WARDROBE

assembly instructions

Step 1.

Put the the wardrobe side and bottom on the floor and join them together. The holes and grooves must match the ones on the picture.

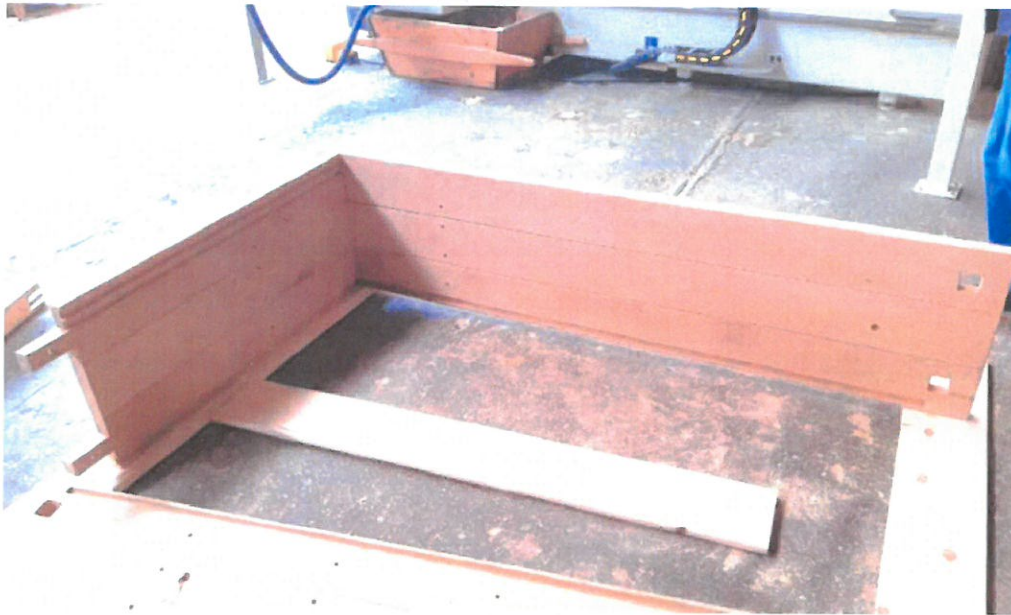

Do the same with the topside. Again watch for the holes and grooves.



Step 2.

Put the wedges in the holes to fix the three parts together.



Step 3.

Carefully put the long shelf and vertical plate in their positions. Again take care of the holes and dowels.



While you are putting the vertical plate, also put the round bar in position.




Step 4.

Put all short shelves with dowels in their position.



Step 5.

From behind (where is one groove) put the two back parts. They must be joined with dowels.

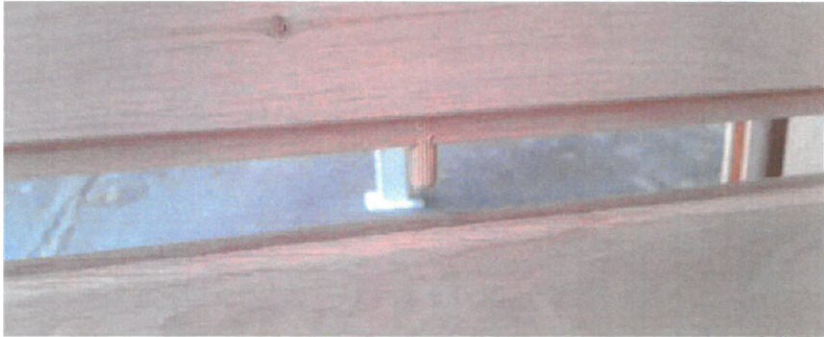

Be sure to connect all the parts well. Use force where necessary.



Now put the doors in the two grooves on the front side. First one with handle down, second with handle up.





Now put the second wardrobe side in place and again watch for the dowels and holes.



Join everything so there is no empty space.



Put the remaining wedges in the holes and be sure that all the angles of the wardrobe are 90°.

