















# BED AURORA - ASSEMBLY INSTRUCTION

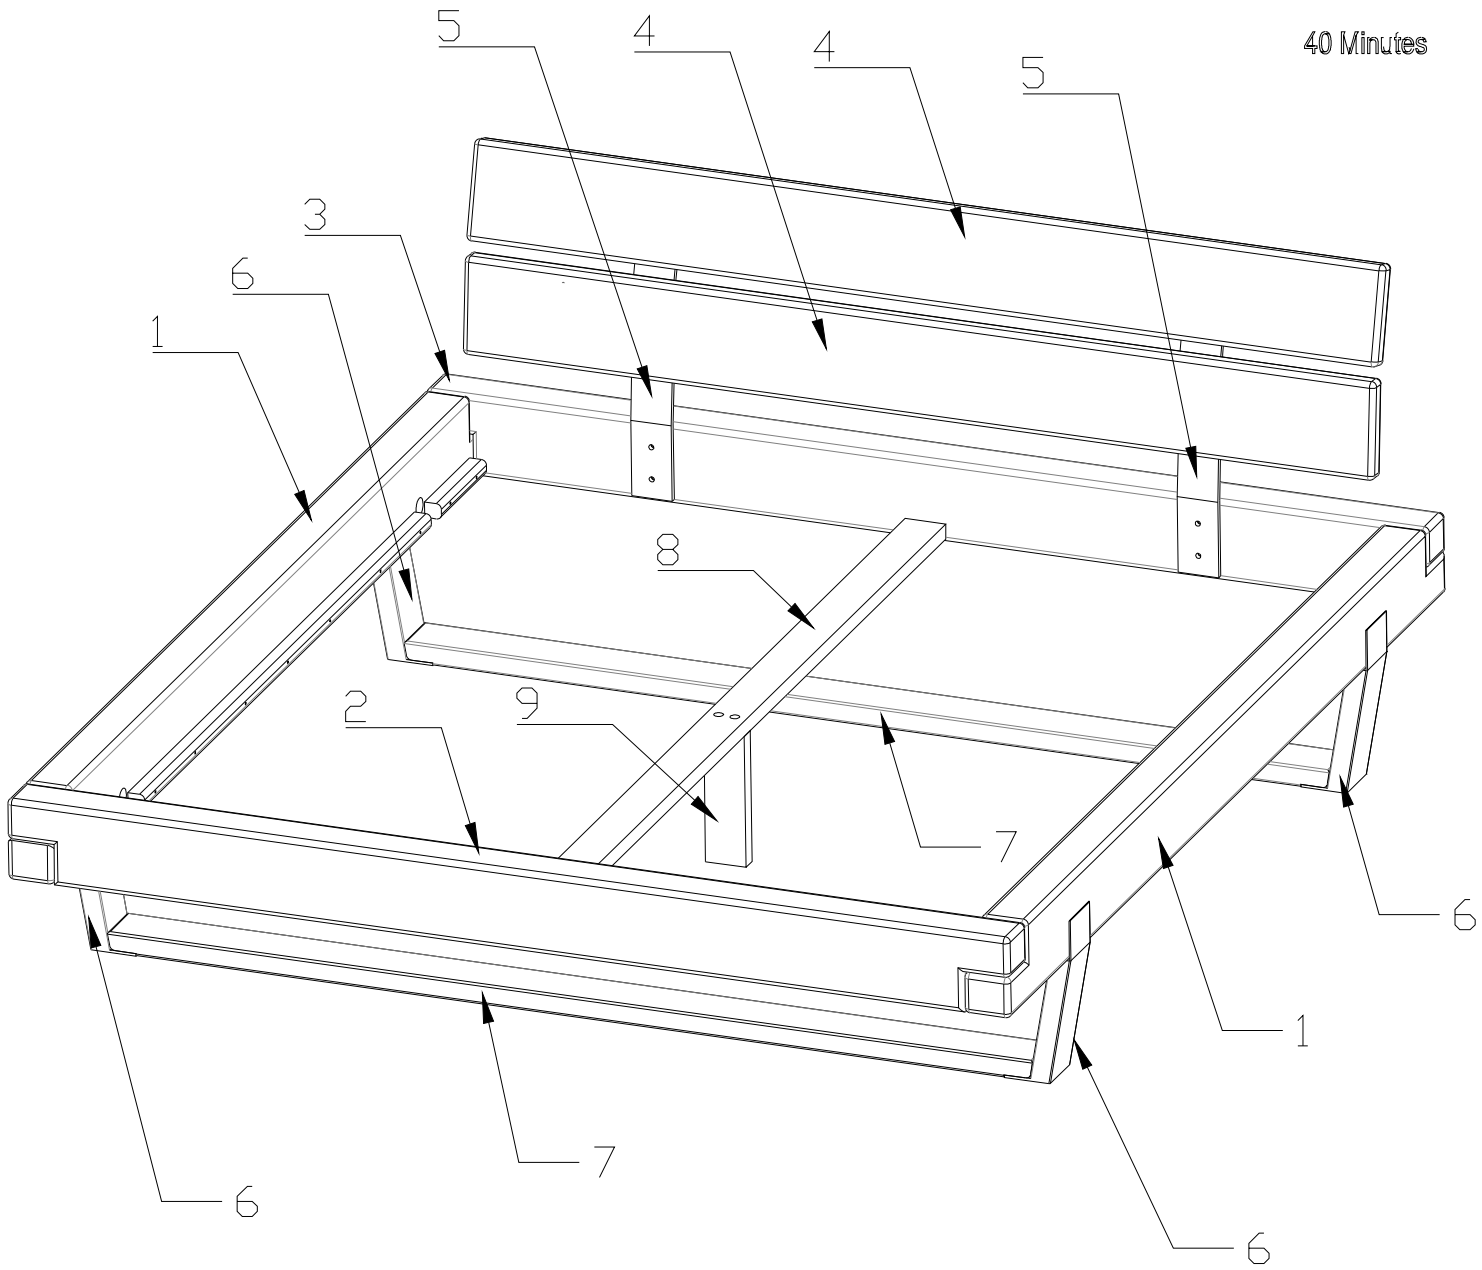




40 Minutes



<p>Ø6x70</p>  <p>Kx2</p>	<p>SW 4</p>  <p>x1</p>	<p>13 mm</p>  <p>x1</p>							
<p>3,5x30</p>  <p>Ax62</p>	<p>M8x85</p>  <p>Bx4</p>	<p>M8</p>  <p>Cx4</p>	<p>M8</p>  <p>Dx4</p>	<p>Ø12x100</p>  <p>Fx4</p>	<p>35x35x90</p>  <p>Gx4</p>	<p>Hx2</p> 	<p>M6x30</p>  <p>Ix12</p>	<p>Jx2</p> 	

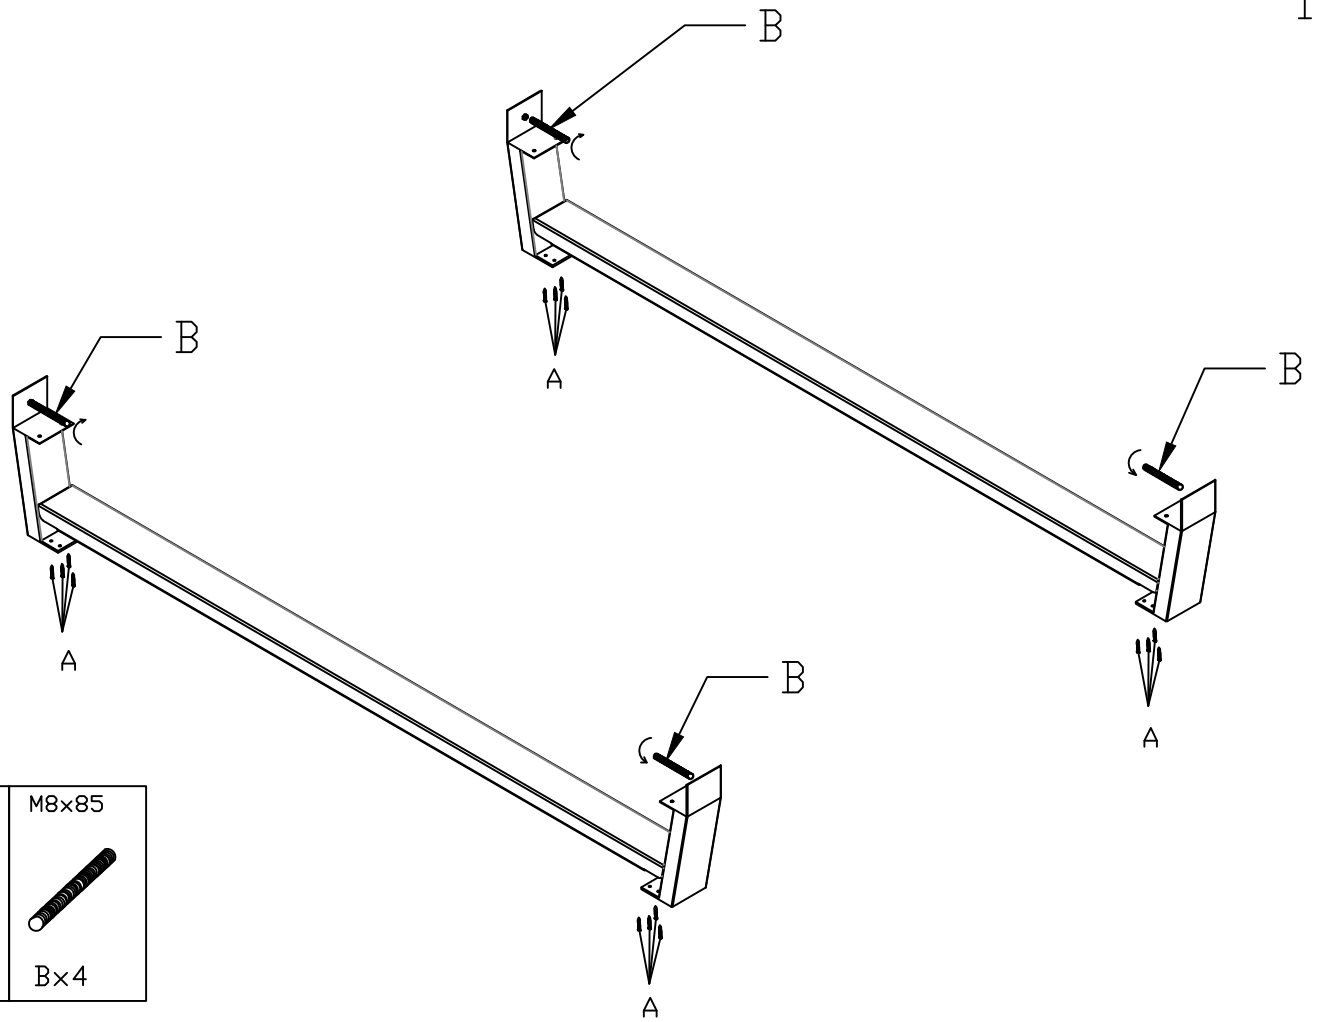
1.






3,5x30	M8x85
	
Ax16	Bx4


2.

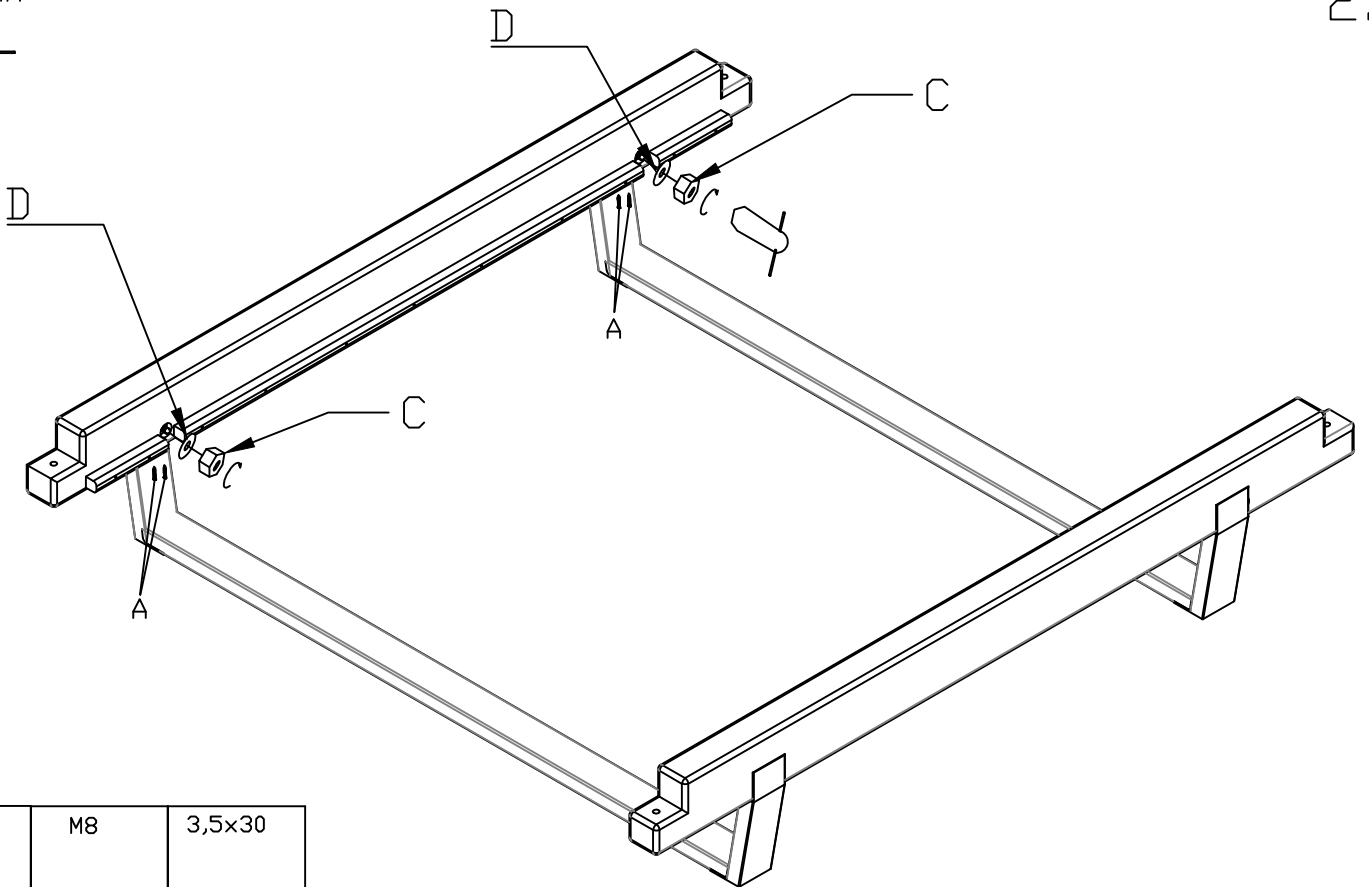13 mm



M8	M8	3,5x30
		
Cx4	Dx4	Ax8

3.

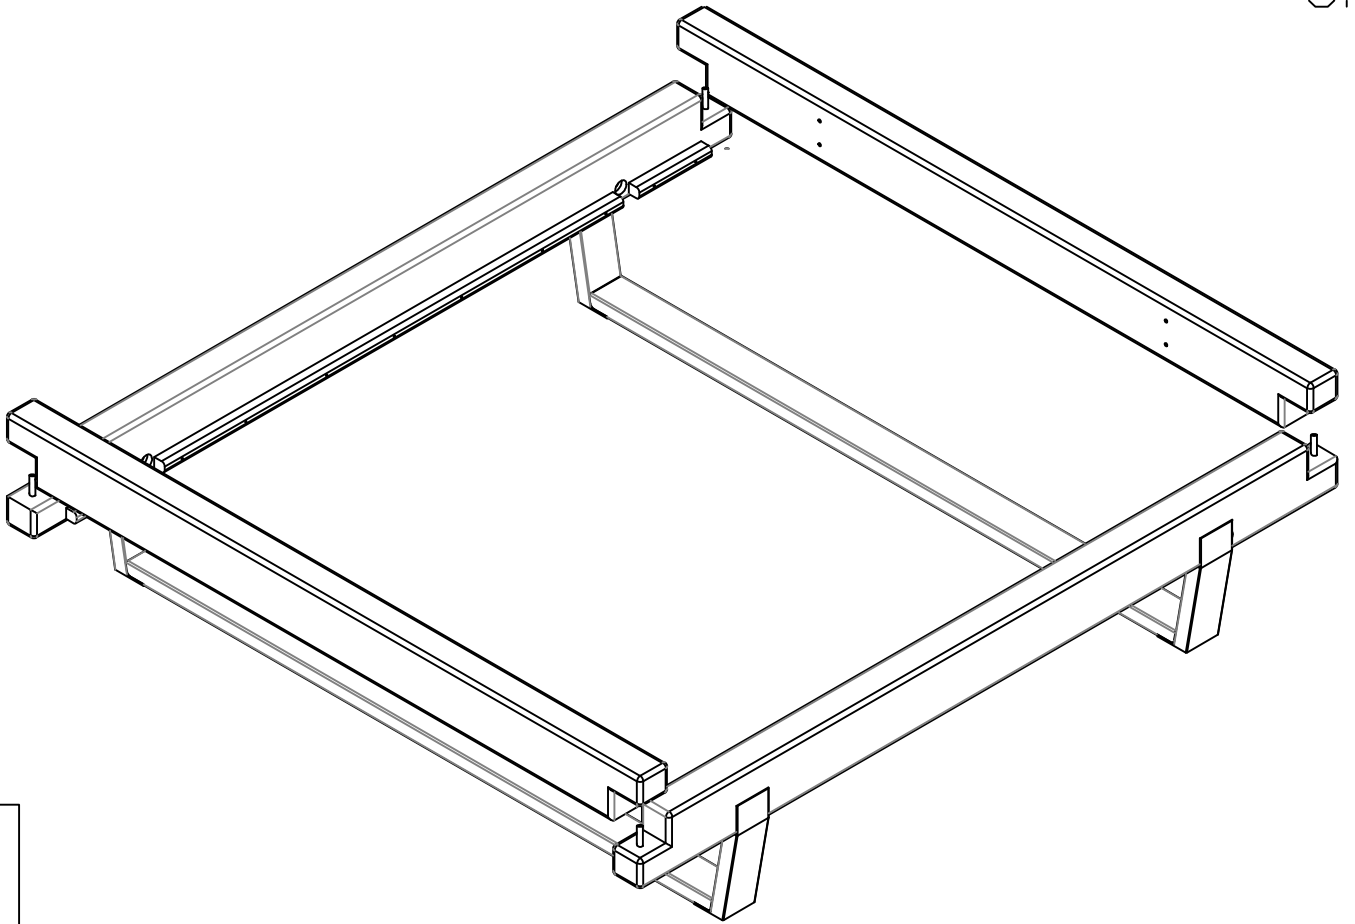


Ø12x100



Fx4

4.

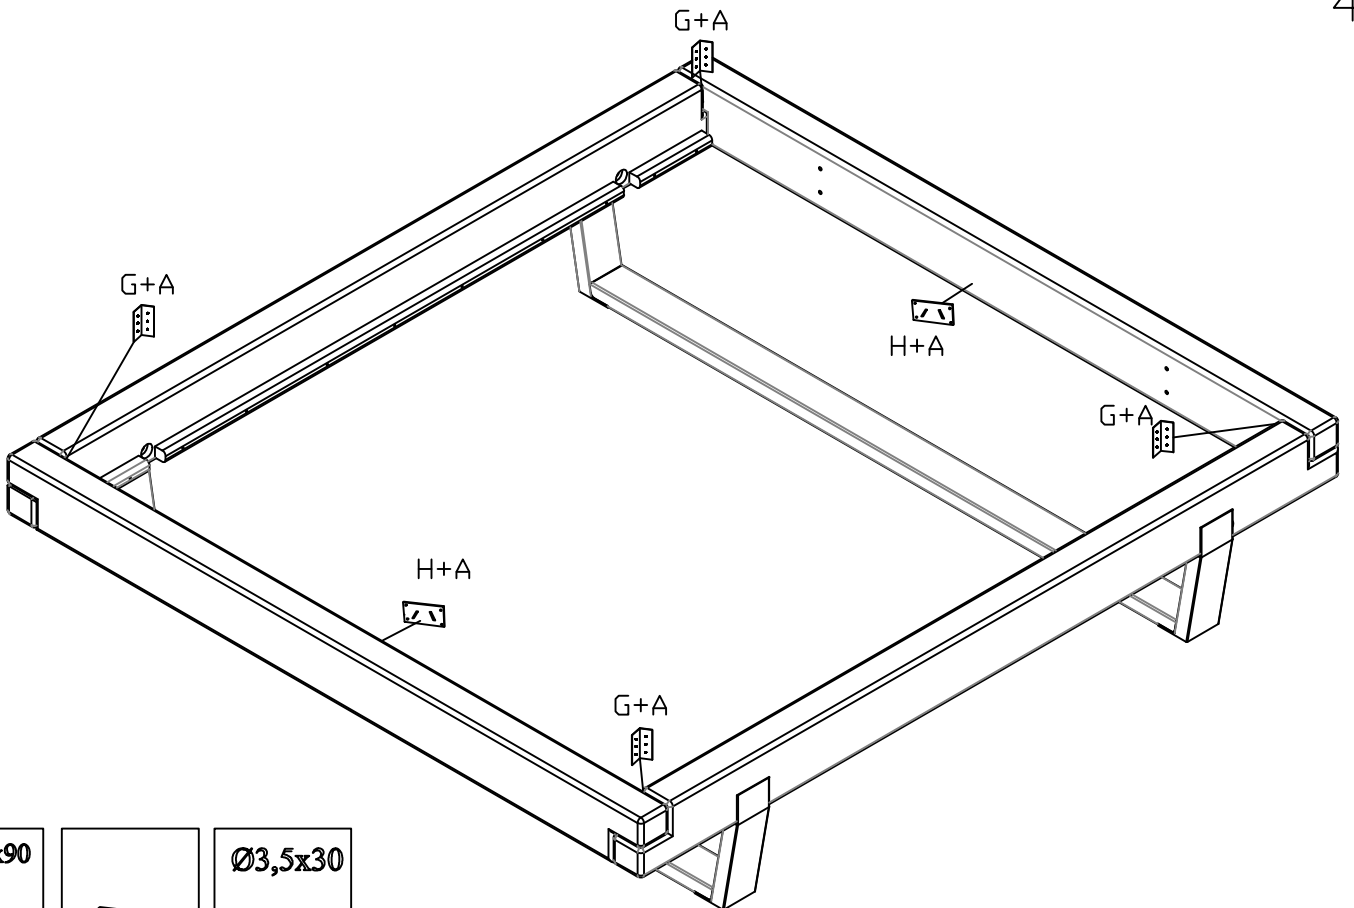

35x35x90



Gx4



Hx2


Ø3,5x30



Ax38

SW 4

5.

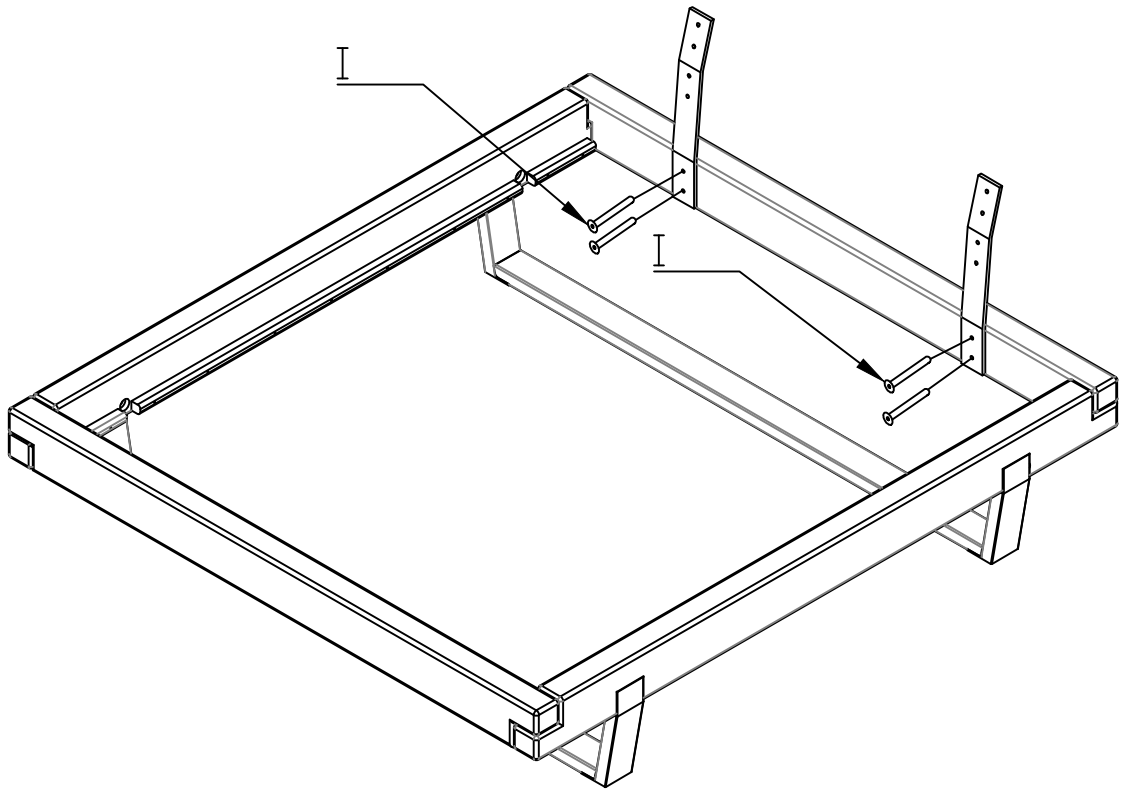


M6x30



Ix4

SW 4


6.

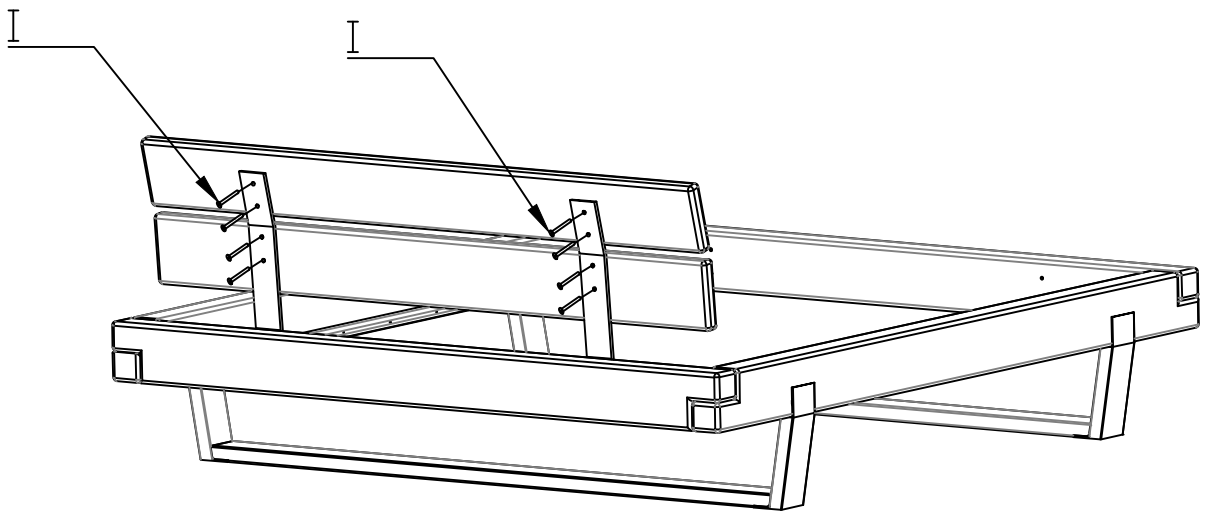




M6x30

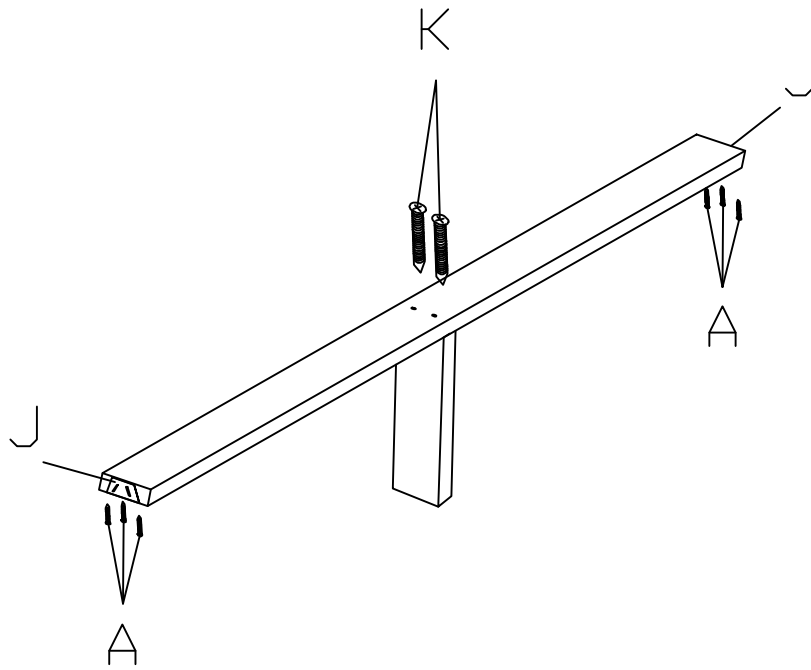

Ix8



3,5x30		Ø6x70
		
Ax6	Jx2	Kx2

