
















# Bed VERONA - ASSEMBLY INSTRUCTION

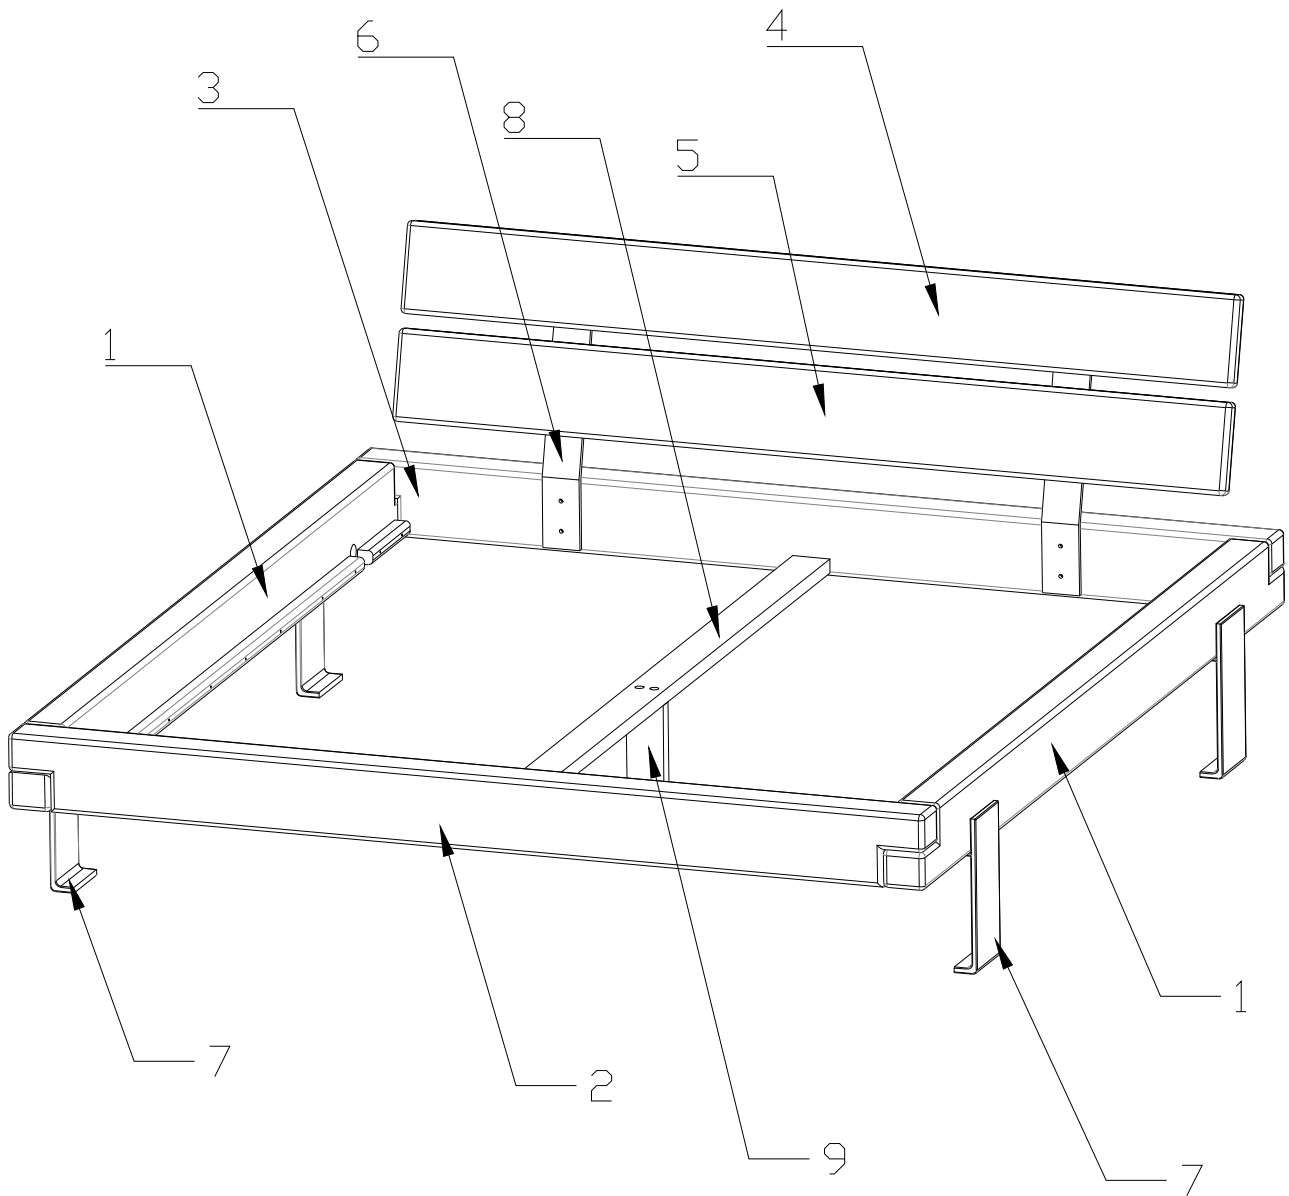


40 Minutes




 Jx2	 Ø6x70 Kx2	 SW 4 x1	 13 mm x1					
 M8x85 Ax4	 M8 Bx4	 M8 Cx4	 3,5x30 Dx46	 Ø12x100 Ex4	 Ø30 Fx8	 35x35x90 Gx4	 Hx2	 M6x30 Ix12

13 mm

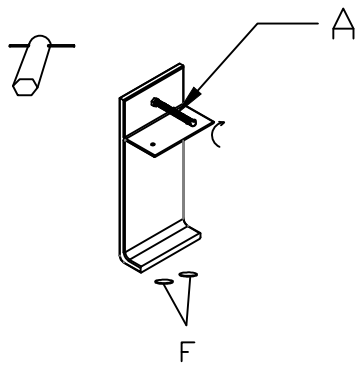

1.

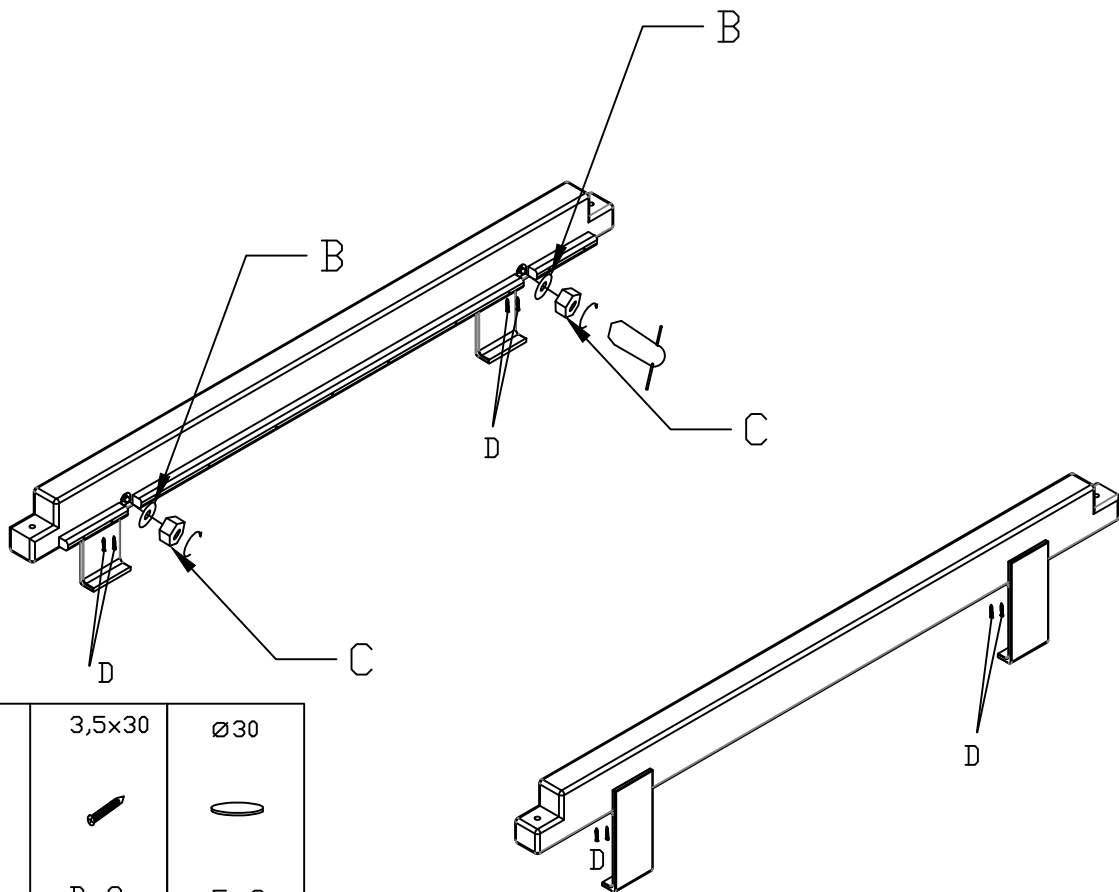

M8x85

M8

M8

3,5x30

Ø30



Ax4


Bx4

Cx4

Dx8

Fx8

2.

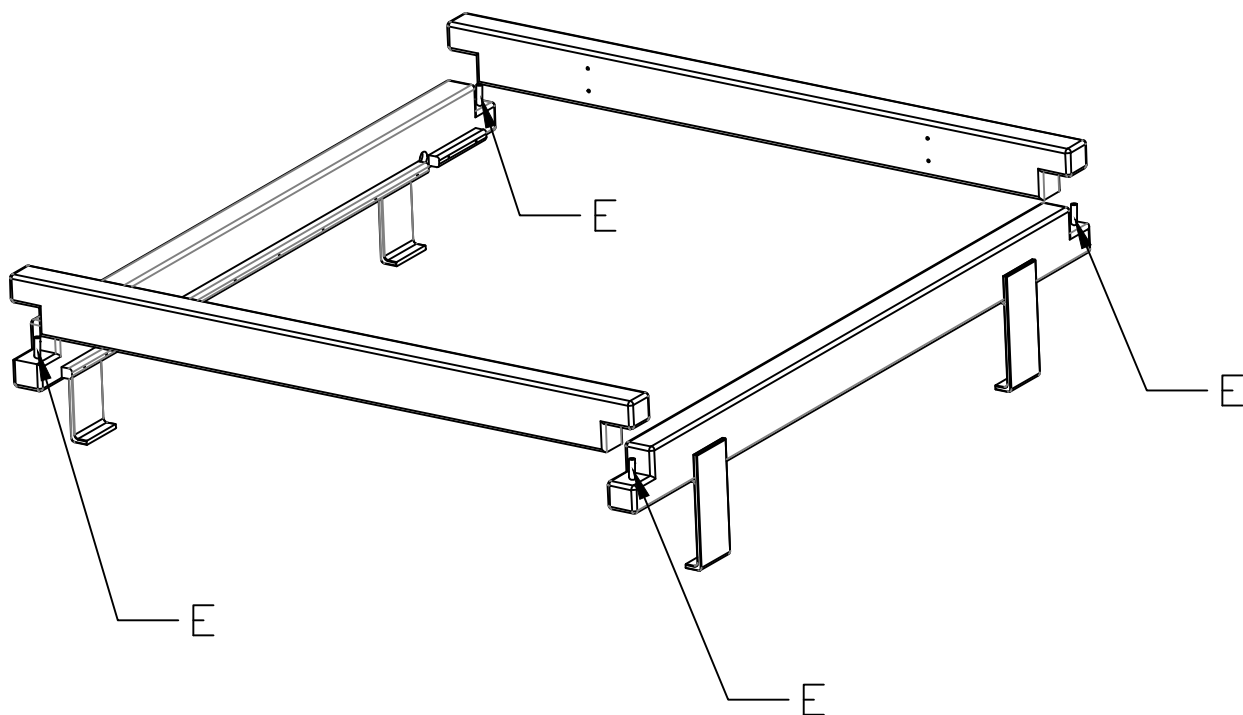





Ø12x100




Ex4

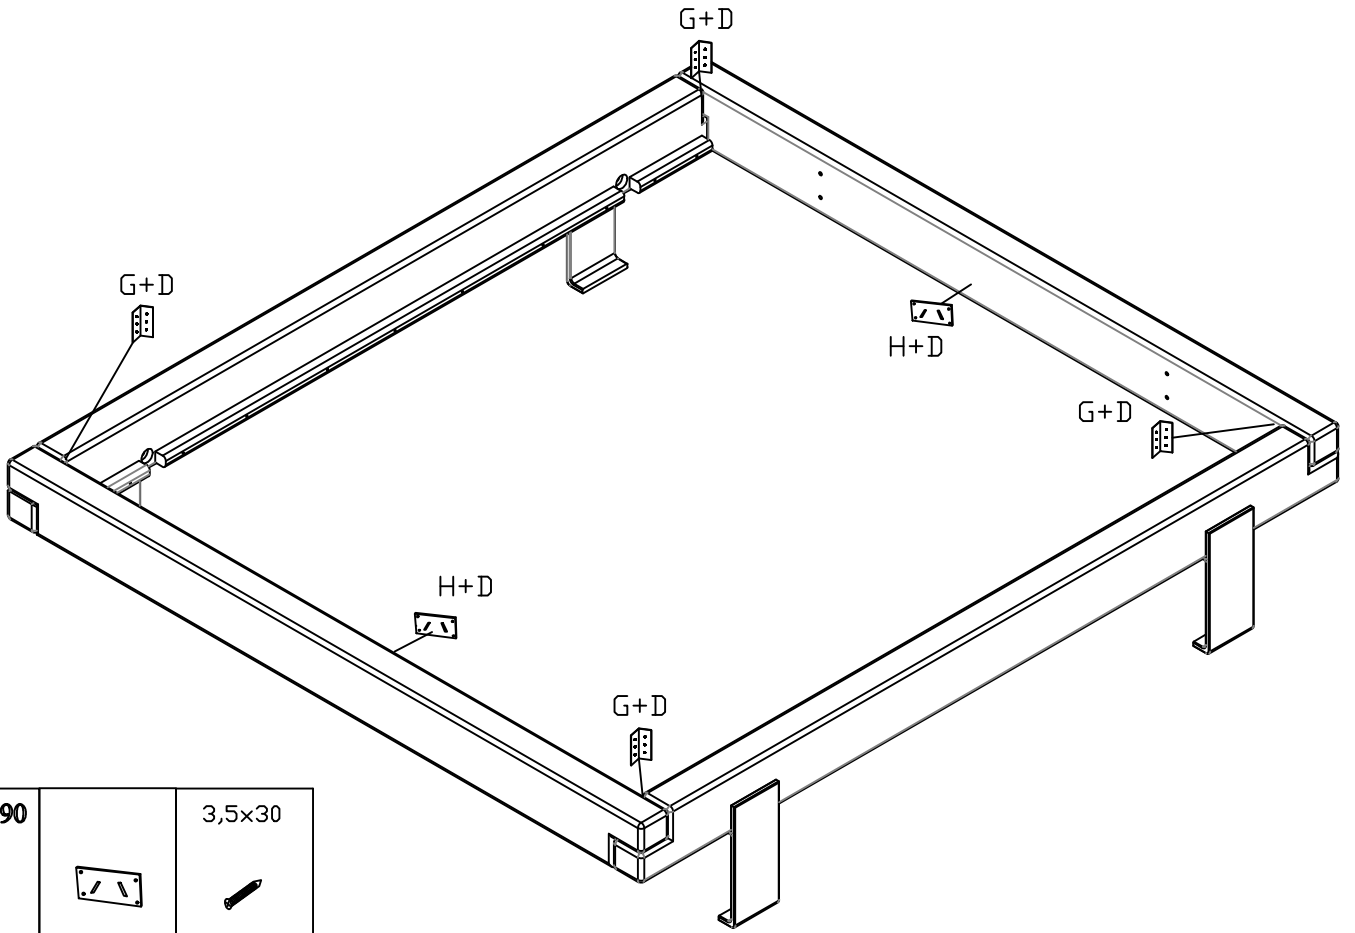
3.




<b>35x35x90</b>		3,5x30
		
Gx4	Hx2	Dx32

4.

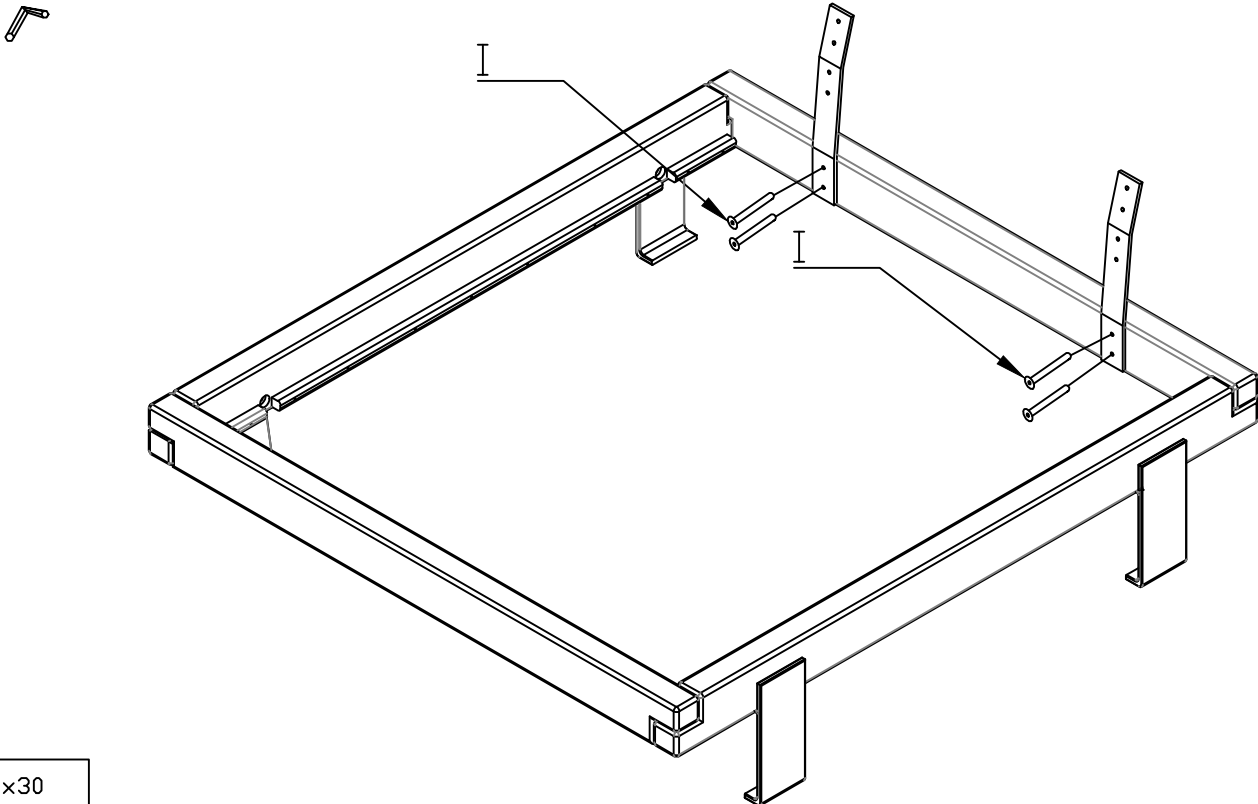

M6x30

Ix4

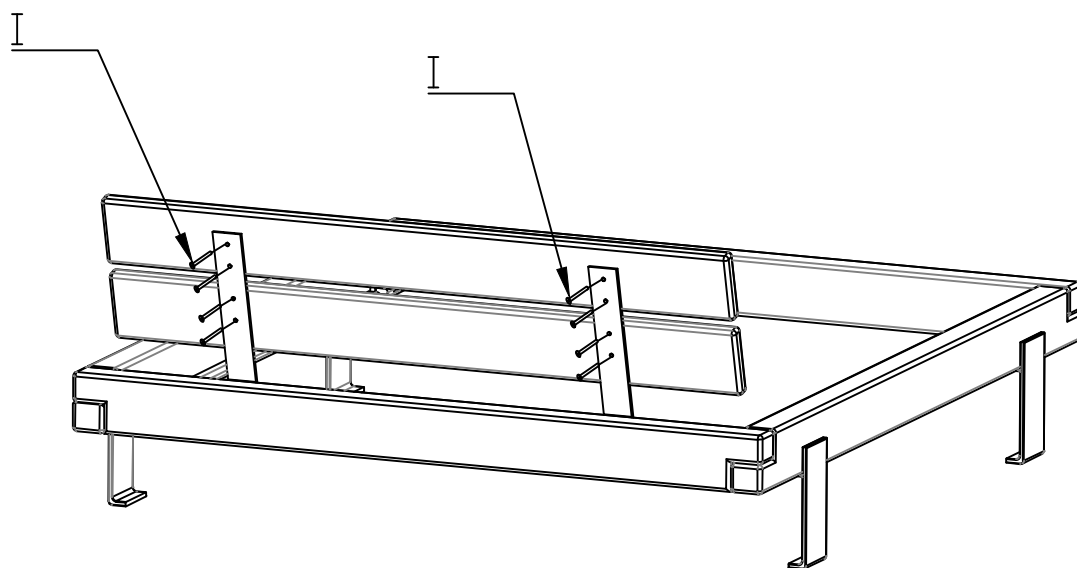5.




M6x30



Ix8

6.

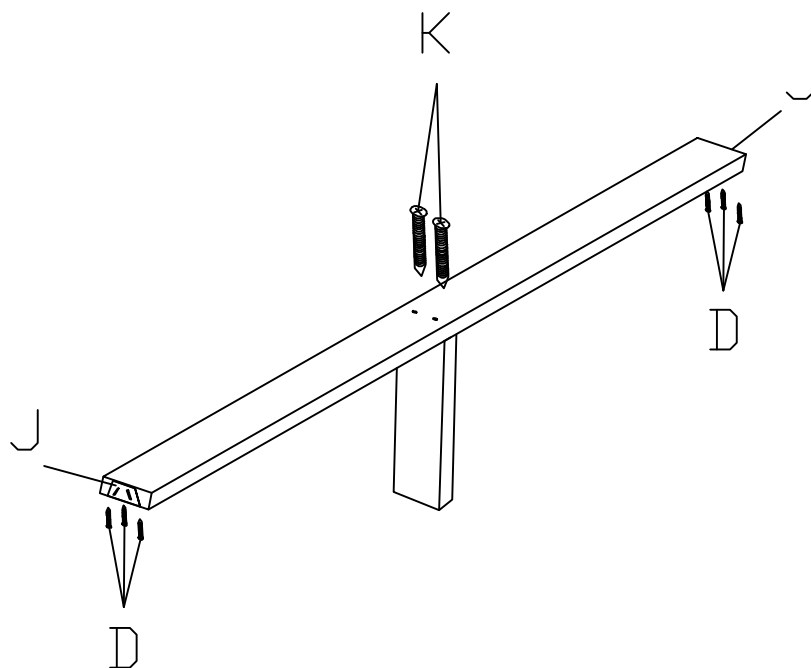

3,5x30



Dx6



Jx2

Ø6x70



Kx2